

Preset Name	Description
chorus_init_3phase	Factory preset, 3 phases modulation chorus.
chorus_2phase	2 phases modulation chorus.
chorus_2phase_Analog	Analog taste 2 phases modulation chorus with half wet level.
chorus_3phase_wet50	3 phases modulation chorus with half wet level.
flanger_init	Factory preset.
phaser_init_4stages	Factory preset, 4 stages phase-shifter.
phaser_4stages_An	4 stages analog taste phase-shifter.
phaser_8stages	8 stages phase-shifter
phaser_12stages	12 stages phase-shifter
compressor_init	Factory preset.
compressor_softclip	Analog taste preset by soft-clipping signal peak.
filter_init_A_LPF	Factory preset A.
filter_init_B_BPF	Factory preset B.
filter_init_C_HPF	Factory preset C.
filter_init_D_LPF+OD	Factory preset D.
filter_LPF_fast	LPF preset with fast frequency transient by DEPTH knob.
filter_BPF_fast	BPF preset with fast frequency transient by DEPTH knob.

Preset Name	Description
rotorus_init_A_ROTATION	Factory preset A.
rotorus_init_B_FIXED	Factory preset B.
rotorus_init_C_DOUBLE1	Factory preset C.
rotorus_init_D_DOUBLE2	Factory preset D.
rotorus_ROT_forHP	ROTATION preset for Head phones.
rotorus_FIX_forHP	FIXED preset for Head phones.
rotorus_DBL1_forHP	DOUBLE1 preset for Head phones.
rotorus_DBL2_forHP	DOUBLE2 preset for Head phones.
delay_init_A_DIGITAL	Factory preset A.
delay_init_B_ANALOG	Factory preset B.
delay_init_C_SWELL	Factory preset C.
delay_init_D_REVERSE	Factory preset D.
delay_DIGITAL_Trail	DIGITAL preset with trail on.
delay_ANALOG_Trail	ANALOG preset with trail on.
delay_ANALOG_DchgX	ANALOG preset without pitch fluctuation when changing TIME.
delay_SWELL_DchgX	SWELL preset without pitch fluctuation when changing TIME.
reverb_init_A_ROOM	Factory preset A.
reverb_init_B_DUCKING	Factory preset B.
reverb_init_C_DETUNE	Factory preset C.
reverb_init_D_SHIMMER	Factory preset D.
reverb_SHIMMER+7-12	Shimmer preset using 2 voices pitch shift, L=+7th and R=-12th(1 oct. down)

※ Trail: A function that leaves a delay sound when the effect is turned off.